




Assembly instructions for 1/144 scale **F-100D SUPER SABRE**

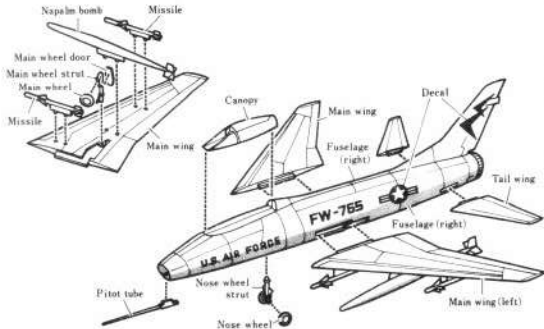

Before assembling model, study sketch carefully. Use cement very sparingly and any excess plastic should be carefully cut away with a sharp knife.

- 1) Cement fuselage halves together.
- 2) Cement canopy over cockpit of fuselage, horizontal stabilizers to fuselage tail section and pitot tube to nose of fuselage respectively.
- 3) After cementing nose wheel to nose wheel strut, cement it to front bottom of fuselage by inserting it into corresponding hole of fuselage.
- 4) Cement right and left wings to both side of fuselage. Cement main landing gear wheels to right and left main struts, then cement this assemblies to underside of wings.
- 5) Place Decal into water for 1 minute, then place on model. Slowly remove paper by sliding.