

Hamilton Hobbies - 1/48 CAC Sabre Conversion

This conversion is for experienced modellers only. Only recommended for the Airfix Canadair Sabre F.4



Main parts

- Fuselage nose
- Fuselage intakes (x8)
- Fuselage underside plugs
- Underbelly fuselage intake
- 2 x 30mm Aden cannons
- Wing flaps (x2)
- Sidewinder pylons (x2)
- Sidewinder missiles (5-parts)

Construction – please make the following amendments to the Airfix instructions -

Step 17 & 18

Delete – do not add the machine guns

Step 19

Replace the part C19 with the Aden 30mm cannon.

Step 25 & 26

Delete – do not add the machine guns

Step 27

Replace the part C28 with the Aden 30mm cannon.

Step 33

Add the four new fuselage inserts to the port fuselage.

Step 34

Add the four new fuselage inserts to the starboard fuselage.

Step 49

Remove the wing flaps and replace with the resin flaps in the down position.

Step 50 &51

Replace the parts C53 and C54 with the resin plugs supplied

Step 53

Remove the nose and replace with the new resin CAC Sabre nose.

Step 54


Add the four new fuselage inserts to the starboard fuselage.

Step 83

Add the two sidewinder pylons to the underside wing – just inboard of the main undercarriage legs.
Add the sidewinder missiles (with the missile fins) to the pylons.

Step 89

Add the pilot's helmet to the canopy or pilot's seat.

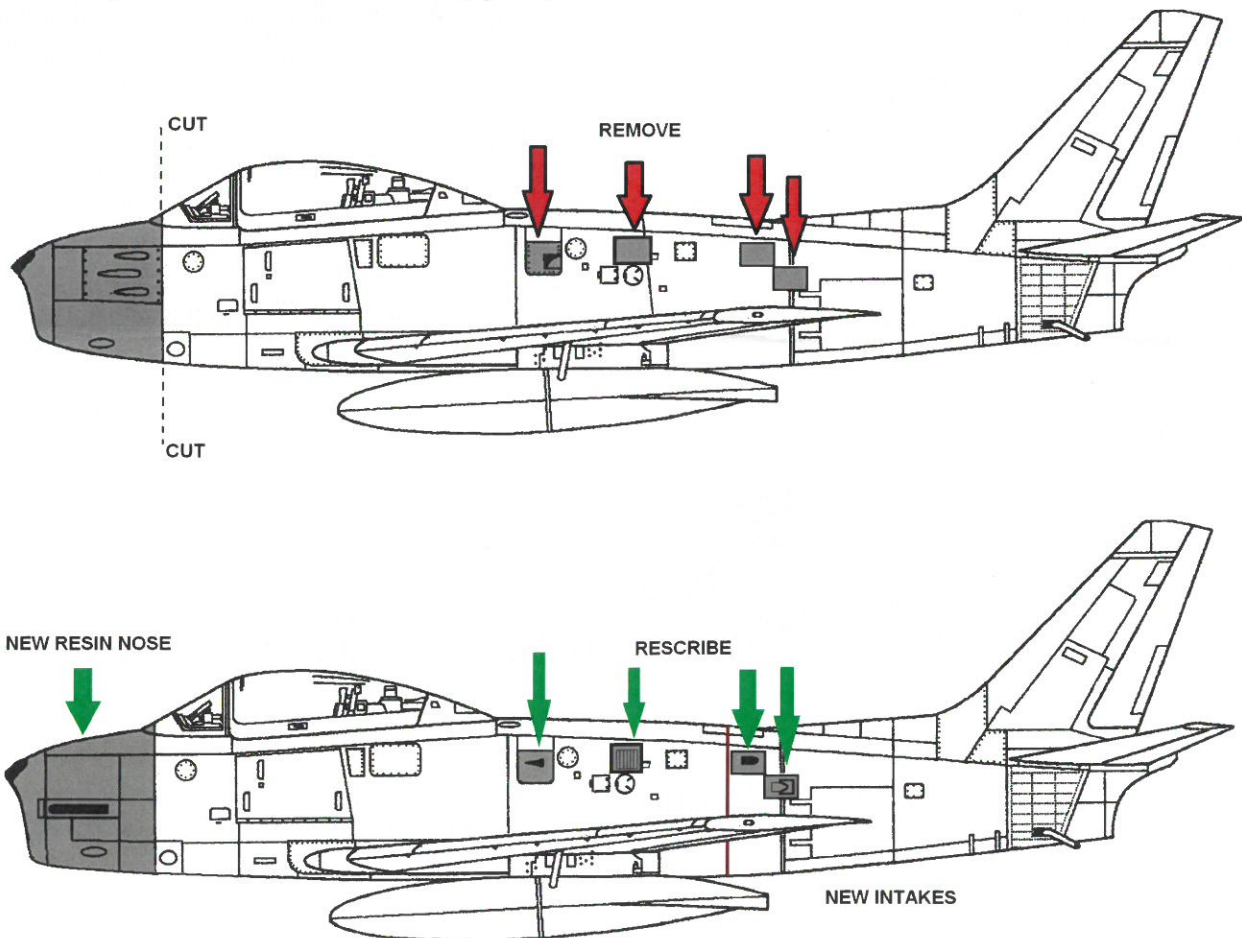

Gun Port



