



AIRFIX-72 SCALE
LYSANDER MK II

WESTLAND LYSANDER (Mark II)

The Lysander, a two-seat, high wing monoplane, was employed mainly as an Army Co-operation aircraft.

This aircraft had an operating speed of 170 m.p.h., a ceiling of 26,000 ft. and range of 600 miles.

The Lysander was armed with one fixed Browning machine gun mounted in each wheel spat, and twin manually operated Browning machine guns mounted in the rear cockpit. Anti-personnel bombs were carried beneath each stub wing.

Among the Lysander's many duties were reconnaissance, artillery spotting, dropping of food and ammunition to beleaguered forces, message dropping and air-sea rescue.

PLEASE OPEN CAREFULLY — INSTRUCTIONS OVERLEAF

AIRFIX

CONSTRUCTION KIT

1/72 SCALE MODEL CONSTRUCTION KIT


WESTLAND LYSANDER

INSTRUCTIONS

PAINT ALL DETAILS AND LET DRY BEFORE ASSEMBLING (SEE SECTION 4)
N.B. FOR PAINTING USE "AIRFIX" PAINTS, FOR FIXING USE "AIRFIX" POLYSTYRENE CEMENT

1

FUSELAGE & TAILPLANE ASSEMBLY

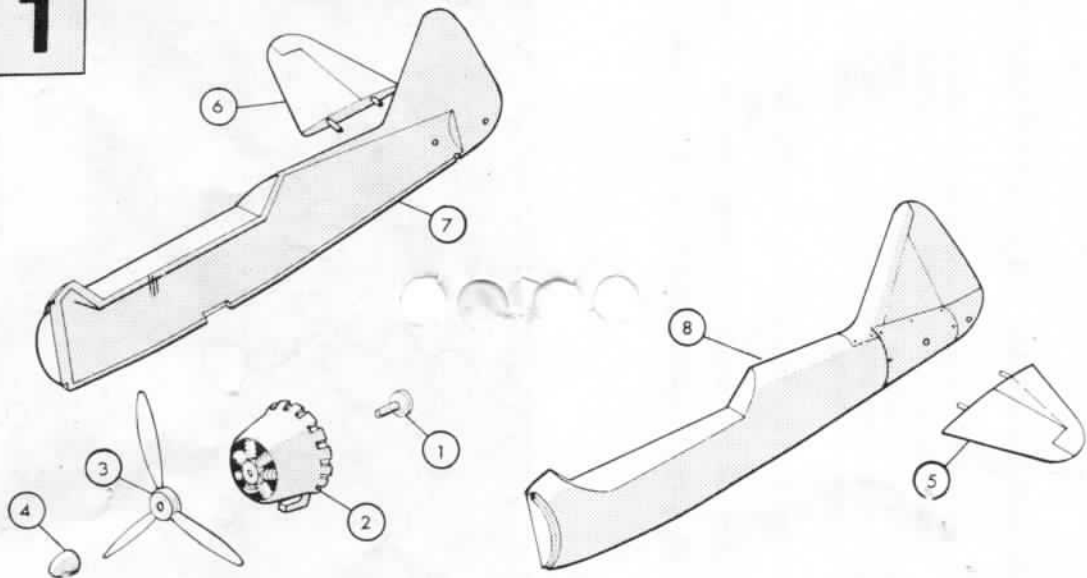

It is recommended that the instructions and exploded views are studied and the assembly practised before cementing together. If it is wished to paint internal details such as crew and cockpit interior this is best done before assembly.


1. From rear insert propeller shaft (1) through hole in centre of cowling (2) through propeller (3). DO NOT CEMENT. Carefully cement spinner (4) onto protruding end of propeller shaft keeping cement clear of cowling,

check propeller and spinner revolve freely, set aside to dry.

2. Cement port and starboard fuselage halves (7,8) together.
3. Cement cowling to front of fuselage, cut out in top of cowling fitting over lug on top of fuselage front.
4. Cement locating pins on port and starboard tailplanes (5,6) into locating holes in rear fuselage sides.

2

UNDERCARRIAGE ASSEMBLY

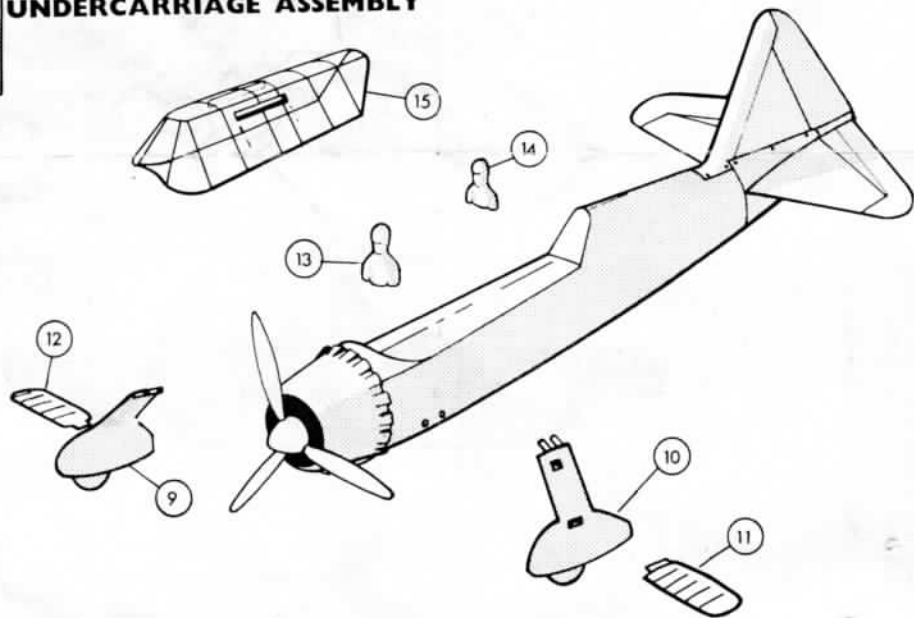

5. Cement locating pins on port and starboard undercarriage legs (9,10) into forward locating holes in fuselage sides.
6. Cement tabs on stub wings (11,12) into lower recesses in undercarriage legs.
7. Position and cement crew (13,14) to cockpit, the larger figure forward, the smaller to rear.
8. Carefully cement cockpit transparency (15) to fuselage, apply cement to edges of canopy only.

3

WING ASSEMBLY



9. Locate and cement wing struts (16,17) into locating holes in port and starboard wings (18,19) then cement tabs on wings into slots in sides of cockpit canopy, at same time locating and cementing lower tabs on wing struts into upper recesses in undercarriage legs. This operation should be carried out quickly before cement dries.
10. Cement bombs (20,21) beneath stub wings.
11. Position and carefully cement radio antenna (22) into locating hole in top of wing.
12. Cement tailwheel (23) into rear locating hole beneath fuselage.

**HAVE
YOU
SEEN
THE**



The Airfix Magazine is the only monthly journal devoted entirely to the hobby of plastic construction kits. Buy a copy today and see for yourself.
1/6 per copy — 24/- annual subscription.

GET MORE FUN FROM YOUR HOBBY WITH THE AIRFIX MAGAZINE

**IN CASE OF COMPLAINT, FILL IN DETAILS BELOW IN BLOCK LETTERS
AND RETURN THE SLIP TO:-**

**AIRFIX PRODUCTS LTD., (Dept. C)
HALDANE PLACE, LONDON, S.W.18**

Name of Construction Kit.....

My complaint is

.....No. of Part.....

Your name.....

Address.....

(P.T.O.)

AIRFIX CHECK LIST—Have you got them all yet?

AIRCRAFT

SERIES 1

Spitfire
 Gloster Gladiator
 E.55 Helicopter
 Westland Lynx
Defiant
 Bristol F.2B
 Messerschmitt 109
 Supermarine S.A.B.
 Fokker D.R.I
 Sopwith Camel
 Albatross D.5
 Bula J.U.19
 Hawker Hurricane
 D.H.9
 Hawker Hart
 Tiger Moth
 F.E.8
 Mig. 15
 Mustang
 Westland Whitehall
 E.E.55
 F.W.190
 Bf109
 Avro
 Goetting
 Spitfire
 Fiat G.91
 Typhoon
 Spitfire
 in Progress
 M.E.262
 Defiant
 Forward II
 Hawker P.11B
SERIES 2
 Spitfire
 Spitfire F.11B
MISSILES
 Bristol Blenheim F.2 V1

Walrus II
 Seafighter
 Lockheed Lightning
 Fairey Swordfish
 M.E.110D
 Avro Anson
 English Electric
 Lightning F1A
 Seafighter F.104-G

SERIES 3
 Blackburn NAM9
 D.H. Hornet
 Bristol 192
 Dominie 217B

SERIES 4
 Wellington
 Fairey Corsair
 Delta
 Heinkel

SERIES 5
 Lancaster
 Bristol Super-freighter
 Fokker Friendship
 Halifax
 Flying Fortress

SERIES 6
 Sunderland
SKYING
SERIES A
 Corsville

SERIES B
 Comet 4B
 Vanguard

GUIDED MISSILES
 Bristol Blenheim

60 SCALE ROLLING STOCK
SERIES 1
 Tank Wagon
 Cement Wagon
 Mineral Wagon
 Brake Van
 Cattle Wagon
 Coal Wagon
 Diesel Locomotive
 Motor Van

SERIES 2
 Rail Bus
 Diesel Crane
 Refrigerator Van
 Locomotive

60 SCALE TRACKSIDE
SERIES 1
 Country Inn
 Detached House
 Service Station
 General Store
 Signal Box
 Bungalow
 Station Platform
 Shop and Flat
 Station Booking Hall
 Seamed Scarab
 Thatched Cottage
 Platform Fittings
 Station Accommodation
 Technical Accommodation
 Level Crossing
 Signal Cabin
 Fencing & Gates
 Telegraph Poles
 Platform Canopy
 Kiosks
 & Platform Steps

SERIES 2
 Footbridge
 Windmill
 Church
 Council Tower
 Travelling Crane
 Water Tower
 Girder Bridge
 Engine Shed

SERIES 3
 Turntable

HISTORICAL SHIPS
 Golden Hind
 Santa Maria
 H.M.S. Shannon
 H.M.S. Victory
 Curry Sack
 Marlborough
 Endeavour
 Or. Westonia
 Revenge

FAMOUS WANSNIPS
SERIES 1
 H.M.S. Conestock
 H.M.S. Darton
 H.M.S. Campden

SERIES 2
 H.M.S. Tiger
 H.M.S. Devonshire

SERIES 4
 H.M.S. Victrolas
 H.M.S. Hood
 H.M.S. Nelson
 Blenheim
 H.M.S. Warspite

FAMOUS SHIPS
SERIES 1
 S.S. Calcutta
SERIES 2
 R.M.S. Queen
 Elisabeth

MILITARY AND HISTORICAL FIGURES
SERIES 1
 Gull-in-Hand
 Lighthouse
 Napoleon
 John of Arc
 Oliver Cromwell
 Charles I

SERIES 2
 Henry VIII
 Black Prince
 Richard I
ANATOMICAL FIGURES
SERIES 3
 Human Skeleton

60 SCALE FIGURES
SERIES 1
 21 Coach Band
 22 Colour Party
 23 Infantry
 Cavalry Group
 24 Farm Stock
 25 German Infantry
 26 British Paratrooper
 27 Cowboys
 28 Indian
 29 4th Army
 30 Foreign Legion
 31 Air Corps

Union Infantry
 Confederate Infantry
 Civil War Artillery
 Wagon Train
 U.S. Marines


CARS
 1911 Rolls Royce
 1904 Daimler
 1930 Bentley
 1910 Ford
 1941 Rolls Royce
 1967 Land Rover
 1923 Morris Cowley
 1904 Mercedes

MOTOR CYCLES
SERIES 1
 Ariel Arrow
ARMOURD VEHICLES
 Panther
 Sherman
 Churchill

25th Field Coy
 Assault Gun
 Sd.Kfz. 3 Tank
SERIES 2
 Tank Transporter
ROBBERS GAMES
SERIES 1
 Barbican Paper
 Spitfire
 Lightning
 Spitfire-Mk.IV
 "B" Type Fighter
SERIES 2
 Zodiac
SERIES 4
 "B" Type Bomber

4

SUGGESTED COLOUR SCHEME

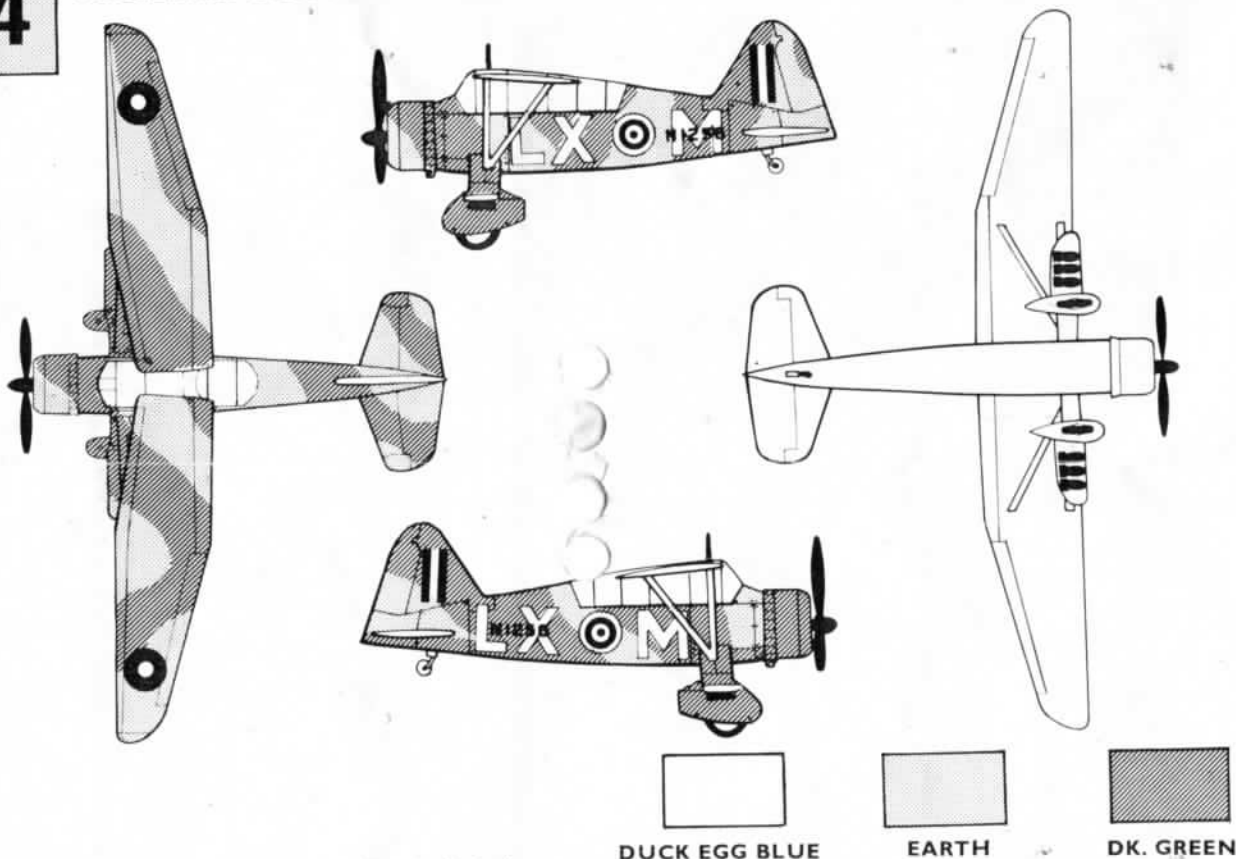

NOTE: If it is wished to paint the model it should be done at this stage.

13. Apply transfers, first cut the sheet into nine separate subjects. Then dip each in hot water for a few moments, slide transfer off backing paper into positions as indicated on illustration. Red and blue roundels on upper surfaces of wings, red, white and blue flashes to either side of fin, Squadron markings LMX and roundel with yellow outline to fuselage sides. When dry apply blue registration numbers N1256 over rear white letters of Squadron markings.

14. Cement together both parts of stand.

15. Cement arm of stand into slot provided in fuselage.

DK. GREEN M3 over

EARTH M5 to give camouflage effect on all upper surfaces.

DUCK EGG BLUE M8 All undersurfaces.

BLACK M6 Propeller, engine, wheel tyres, bombs.



NI256

NI256

WESTLAND LYSANDER II

